

BANDITarf

Assembly & Operation Manual

JR SERVO AND EXTENSION REQUIREMENTS

CONTROLS	QTY	SERVO TYPE	QTY	LEAD EXT
Ailerons	2	JR 9411	2	12"
			2	36"
Elevators	2	JR 3421	2	48"
Rudder Swept or Std Fin	1	JR 9411	1	36"
Nose Steering	1	JR 9411	1	"Y" Harness
Retract Valve	1	JR 351		N/A
Flaps	2	JR 8411	1	Match Box
			2	36"
			2	3"
Smooth Stop	1	JR 351		N/A
Battery	1	JR 1800 MAH 5-cell		
	1	5.2 Voltage Regulator		
Switch	1	JR Deluxe harness		

NOTE: IF EQUIPMENT OTHER THAN JR IS USED, CONSULT THAT MANUFACTURER FOR SIMILAR COMPONENTS.

*NOTE: Reverse servos and Y-harnesses are not required when 2 servos are used with a JR Match Box.

The JR Match Box can also be used on rudder and nose gear steering to avoid any need for reversed servos.

Radio manufacturers are constantly improving their equipment - consult their representatives or BVM (JR only) for the latest and best servos.