

Ultra BANDIT
ASSEMBLY & OPERATION MANUAL

BVM Ultra Bandit RADIO CONTROL COMPONENTS

CONTROLS	QTY	SERVO TYPE	QTY			LEAD EXT
			Fuse	Tail	Wing	
Ailerons	2	JR 8611A	2			ALL HD 24"
					2	24"
						"Y" Harness
Elevators	1	JR 8611A		2		24"
	1	JR 8611AR	2			24"
			1			"Y" Harness
Rudder	1	JR 8611A	1			36"
				1		12"
Nose Steering	1	JR 8411				
Retract Valve	1	JR 351				
Flaps	1	JR 8611A	2			24"
	1	JR 8611AR			2	6"
Smooth Stop	1	JR 351	1			
Battery	2	Spektrum 4000 mah Li-ion				
	2	Spektrum VR6010 Volt Regulator				

NOTE: IF EQUIPMENT OTHER THAN JR IS USED, CONSULT THAT MANUFACTURER FOR SIMILAR COMPONENTS.

JR Heavy Duty servo arm to be used on elevator (comes standard with 8611 servo).

Optional: MatchBox on rudder/ng and flaps